

MAINTENANCE

MAINTENANCE

It is unnecessary to disassemble the upper LED housing of your light. Doing so may damage the lantern and void the warranty.

Please clean your light periodically. if needed wipe the base with damp cloth after each use.

During normal use, we recommend charging your Beacon at least every 3 months to maintain the longevity of the Lithium Ion Battery. If your lantern will not be used for extended periods, we recommend removing the battery for storage.

WARNING

The Beacon is a high-intensity lighting device. Avoid shining the light directly into eyes. This product is not intended for use by children.

PRODUCT WARRANTY

This product comes with a 1 year warranty.



LUMENS:
LOW- HIGH
30-220 LMS



RUN TIME:
200+ HRS LOW
5-6 HRS MED
3 HRS HIGH



RECHARGEABLE
BATTERY:
2200 mAh 3.7 V
8 WH. LI-ION CELL



6 LEDs: 3 WATT
LIGHT SPECTRUM:
3000K



CHARGE VIA USB
CHARGE TIME:
4-5 HRS



INCLUDED:
30" USB EXTENSION
CHARGING CORD



BAREBONES

Questions? Comments?
We'd love to hear from you.

call: 1-855-895-7040

email: info@barebonesliving.com

 
www.barebonesliving.com

BEACON

USER
GUIDE

RECHARGEABLE LANTERN


1 YEAR WARRANTY

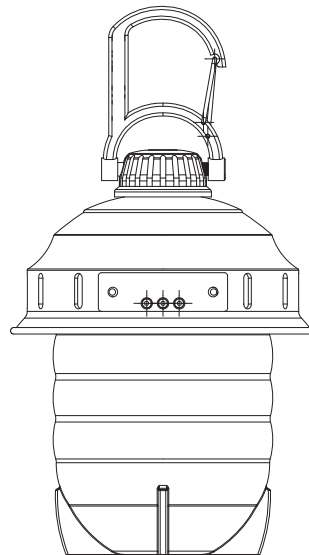

BAREBONES

KEY PRODUCT FEATURES

 The compact, rechargeable, Beacon is packed with 220 lumens of bright light. The Beacon is the perfect go anywhere, do anything light.

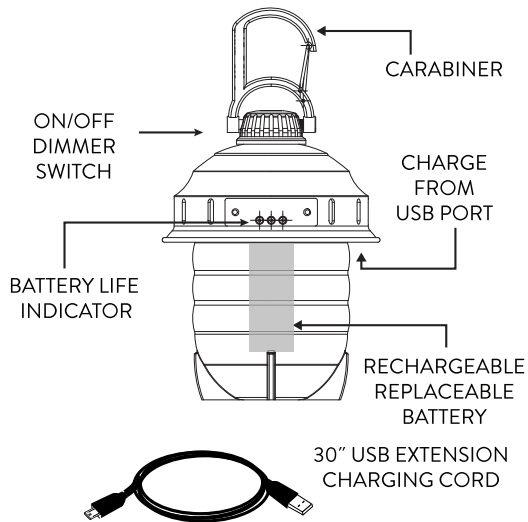


OPERATING INSTRUCTIONS

ON/OFF

Twist dimmer switch clockwise to turn on. Twisting the switch all the way to the stop position will engage your light to its brightest setting.


ADJUSTING BRIGHTNESS

 Your lantern is equipped with a dimmer to adjust brightness.

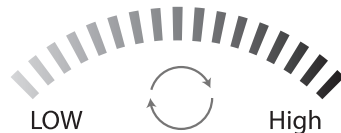

CHARGING YOUR LANTERN

 USB charging cord is nested under the lantern hood. Turn your lantern upside down to locate cord. Pull it down and plug into standard USB charging port.

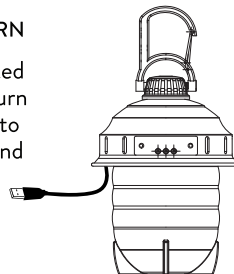


OPERATING INSTRUCTIONS

REPLACING YOUR BATTERY

Holding the top firmly Twist lens base counter clockwise to remove.

 Twist battery compartment counter clockwise. Remove old battery and replace with the new. Re-assemble battery compartment. Lens will only engage in the correct positions when flat spot on lens aligns with USB plug on the back. Twist clockwise to lock.

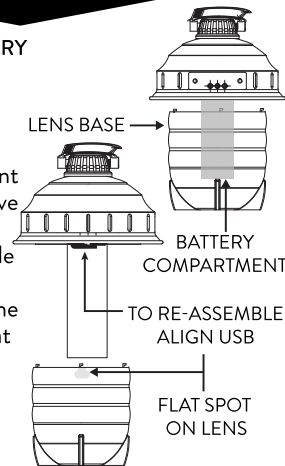

ABOUT YOUR BATTERY

A replacement battery can be purchased at www.barebonesliving.com.

•Warning: Please **ONLY** use Barebones Batteries in this Lantern. Different brands, size, capacity, or type may cause damage to the lantern or the batteries being used and void your warranty.